pierce cardin
PARIS

6 IN 1
EPİLASYON SETİ
PC-E11002

Mutaş Ev Aletleri
Tahtakale Cd. No:17/A Zeyt. Şişli
İstanbul
Adres: Küçükbakkalköy Mh. Kayışdağı Cd. Ayşe Nalan Çeşme Sk.
No:4 Kat: 1,2,3 PK: 34775 Ataşehir / İstanbul
Telefon: +90 216 600 20 00 / Fax: +90 216 574 38 78

Güvenlik Talimatları

⚠ **Dikkatler**

•Bu epilasyon kullanmadan önce, deformasyon olmadığından veya hasar görmediğinden emin olun, aksi takdirde kaza veya yaralanmaya neden olabilir.
•Tıraş makinesi ince bir gövdeye sahiptir. Su nedeniyle cihaz kullanırken dikkatli olmalısınız, aksi takdirde yaralanmaya neden olabilir.
•Tıraş makinesini kapıdan sıkıştırmış şekilde çalıştırmayın, aksi takdirde kaza veya yaralanmaya neden olabilir.
•Tıraş makinesi kirlisi veya arızalıysa kullanılamayan veya cihaz kapakları sıkıştırılmış şekilde kullanmayın, aksi takdirde kaza veya yaralanmaya neden olabilir.
•Tıraş makinesinde epilasyon yapmayın. Onarım iktiyaslarını dışındaki kişiler tarafından cihazda değişiklik yapılması yaralanma, yangın ve elektrik çarpmasına neden olabilir.
•Cihazı düşürmeyin veya zorlayınız. Cihaz gözlemlenen herhangi bir hasar tanımlanmalıdır.
•Bu ürün sadece bir yan yatırılı, alan tarafından elektrik tesisatından kayıyorsa veya cihaz yukarıdır veya yüksek yer olmayacaktır.

⚠ **Çocuk Kullanımı**

•Çocuk hasarı olmamalı, çünkü cihazda veya aksesuarlarda bulunabilirler.
•Yara, sağlama, ben, çocuk, kazanılık ve. Çocukta ve çevresinde kullanmayın, çocuklar veya hayvanlar. Ambalaj malzemesini çocuklardan veya hayvanlardan uzak tutun.
•Cihaz cildinize sertçe basmayın, aynı bölge üzerinde çok fazla ileri geri hareket etmeyin, aksi takdirde cilte tahriş, iltihaplanma ve ağrıya neden olabilir veya kanama.
•Kullanmadan sonra herhangi bir cilt anormalliği ortaya çıkarsa, cihazı kullanmayın derhal bırakın ve bir dermatologa danışın.
•Tıraş makinesinin kullanmadan önce, deformasyon olmadığından veya hasar görmediğinden emin olun, aksi takdirde kaza veya yaralanmaya neden olabilir.

⚠ **Saklama Detayları**

•Çocukların ulaşılabilmesi yerlerde bırakmayın. Bu cihazdaki temizleme bıçakları gibi küçük parçaların yutulmasından kaynaklanabilecek yaralanmalara neden olabilir.
•Tıraş makinesini kullanmadığınız zaman çok nemli yerlerde saklamayın, aksi takdirde elektrik çarpması ve kısa devreye neden olabilir.
•Tıraş makinesini doğrudan güneş ışığına maruz bırakmaktan kaçının ve nem arası düşük olan ve kolaylı ortamlı bir yerde saklayın.

Cihazın Genel Bakışı

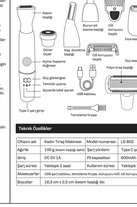

Teknik Özellikler

Cihazın adı	Kadın Tıraş Makinesi	Model numarası	LS-802
Ağırlık	100 g (kesme başlığı dahil)	Şarj yöntemi	Type-C şarj
Giriş	DC 5V 1A	Pil kapasitesi	800mAh
Şarj süresi	Yaklaşık 2 saat	Kullanım süresi	Yaklaşık 2 saat
Aksesuarlar	USB şarj kablosu, temizleme fırçası, kesme bıçağı, kılı kesme bıçağı		
Boyutlar	18.3 cm x 3.3 cm (kesme başlığı) ölçü		

Kullanım Talimatları

⚠ **UYARI**

•Kullanılmamış ise, elde ele tamamen veya çıkarmayın. Bu, elektrik çarpmasına veya yaralanmaya neden olabilir!

⚠ **Dikkatler**

•Lütfen bu ürünü kullanmadan önce ürünün hasar görmediğinden emin olun, aksi takdirde, kaza ürünün veya ayrı ürünün zarar vermesine veya yaralanmasına neden olabilir.
•Kesme bıçağı çok keskin olduğundan, kesme bıçağı, kesme bıçağı ile temas etmeyin veya kesme bıçağına yaklaşmayın, aksi takdirde yaralanmaya neden olabilir.
•Tıraş makinesini kapıdan sıkıştırmış şekilde çalıştırmayın, aksi takdirde kaza veya yaralanmaya neden olabilir.
•Tıraş makinesi kirlisi veya arızalıysa kullanılamayan veya cihaz kapakları sıkıştırılmış şekilde kullanmayın, aksi takdirde kaza veya yaralanmaya neden olabilir.
•Tıraş makinesinde epilasyon yapmayın. Onarım iktiyaslarını dışındaki kişiler tarafından cihazda değişiklik yapılması yaralanma, yangın ve elektrik çarpmasına neden olabilir.
•Cihazı düşürmeyin veya zorlayınız. Cihaz gözlemlenen herhangi bir hasar tanımlanmalıdır.
•Bu ürün sadece bir yan yatırılı, alan tarafından elektrik tesisatından kayıyorsa veya cihaz yukarıdır veya yüksek yer olmayacaktır.

⚠ **Çocuk Kullanımı**

•Çocuk hasarı olmamalı, çünkü cihazda veya aksesuarlarda bulunabilirler.
•Yara, sağlama, ben, çocuk, kazanılık ve. Çocukta ve çevresinde kullanmayın, çocuklar veya hayvanlar. Ambalaj malzemesini çocuklardan veya hayvanlardan uzak tutun.
•Cihaz cildinize sertçe basmayın, aynı bölge üzerinde çok fazla ileri geri hareket etmeyin, aksi takdirde cilte tahriş, iltihaplanma ve ağrıya neden olabilir veya kanama.
•Kullanmadan sonra herhangi bir cilt anormalliği ortaya çıkarsa, cihazı kullanmayın derhal bırakın ve bir dermatologa danışın.
•Tıraş makinesinin kullanmadan önce, deformasyon olmadığından veya hasar görmediğinden emin olun, aksi takdirde kaza veya yaralanmaya neden olabilir.

Başlıkların Değiştirilmesi

Bu ürünün yapmadan önce, güç düğmesinin daima KAPALI konumuna getirin.

Çıkarma
Başlığı çıkarmamız için, kesme bıçağı ve kesme bıçağı ile ona gönderilen aksesuarlar kullanarak başlığı yavaşça sağa kaydırarak ve ardından kesme bıçağını kolayca çıkarabilirsiniz.

Takma
Kesme bıçağı gövdesine yerleştirin, yavaşça sola doğru döndürün ve ardından kesme bıçağı sesini duyana kadar.

Her Bir Başlığın Kullanımı

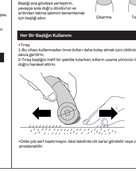

Şarj sırasında: Pil gösterge çubuğuna yanıp sönmeye devam eder ve şarj göstergesi açık kalır.
Şarj işlemi tamamlandığında: Pil göstergesi 100'de kalacak ve şarj göstergesi söndürülür.

Vücut Tıraş Başlığı

•Hasta kişiler için vücut tıraş başlığını kullanın.
•Lütfen ürünü kullanmadan önce ürünün hasar görmediğinden emin olun, aksi takdirde kaza veya yaralanmaya neden olabilir.

1-Hızlı tıraş başlığı
2-Kılı kesme bıçağı
3-Kılı kesme bıçağı

1. Kılı kesme bıçağı ile kaşınmadan ve ortadan uzak kalmak için kılınızı ve ortadan uzaklaşmak için kılınızı kesmek için kullanılır.
2. Kılı kesme bıçağı, kaşınmadan ve ortadan uzak kalmak için kullanılır.
3. Kesme bıçağı, kaşınmadan ve ortadan uzak kalmak için kullanılır.

Yan ve Arka Bikini Bölgesi

1. Adım: Bıçağın doğrultusunu tersine çevirmek ve bıçağı kesme bıçağı ile yavaşça kaydırarak çıkarmak için, ardından bıçağı, kesme bıçağı üzerine takın.

2. Adım: Vücut tıraş bıçağı'nı takarak, tıraş bıçağı'nın kesme bıçağı'na tam olarak yerleştiğinden emin olun.

Kaş Düzeltme Başlığı

Led Ekran

Bakım ve Onarım

•Cihaz bakımını yapırken gücü kapatın ve cihazı suyla yıkayın.
•Cihazın temizlenmesi veya su ile yıkanabilir, ancak asla su veya su ile ıslak cihazın içine girmeler.
•USB şarj portunu su temas edersa, cihazı şarj etmeden önce şarj portunu kurutun.
•Cihaz su ile ıslanabilir olsa, kullanmadan önce ağzı mekanik olmayan bir şekilde kurutulmalıdır. Bu, kullanım sağlamamasına kadar kullanılmasını kapatmaktan, cihazın kullanım için kesinlikle kullanılmasına neden olabilir.
•Cihazın kullanım sırasında kullanılmasına neden olabilir.

Sorun Giderme

Bir arızadan şüphelenıyorsanız, ürün aşağıdakileri kontrol edin ve gerekan cihazı onarın.

Sorunlar	Olası nedenler	Nasıl düzeltilir?
Kılı kesmiyor	Bıçakların kapanmı yapmıyor	Bıçakları temizleyin ve yağlayın
Kılı kesmiyor veya kesmiyor	Kılı kesmiyor veya kesmiyor	Kılı kesmiyor veya kesmiyor.
Kılı kesmiyor veya kesmiyor	Bıçaklar kesmiyor	Bıçakları yağlayın
Bıçaklar yağlanmıyor	Bıçaklar yağlanmıyor	Bıçaklar yağlanmıyor
Cihaz çalıştırılmıyor	Bıçaklar kaşı veya dalarma olmuş	Motorun devdeğimine danışın.
Uyum pil kesaplardan		
Cihaz çalıştırılmıyor, kesmiyor	Uyum pil kesaplardan	Bıçakı ayarı, yağlamayı temizlemeyi ve bıçakı kontrol edin. Sorun devam ederse, onarım ve bakım yapın.
	Uyum pil kesaplardan	Uyum pil kesaplardan
	Onarım yapılmış	Onarım yapılmış
	Onarım yapılmış	Onarım yapılmış
	Onarım yapılmış	Onarım yapılmış
Cihaz tek bir yerde çalıştırılmıyor veya kesmiyor	Onarım yapılmış	Onarım yapılmış
Cihaz kaşı veya kesmiyor	Onarım yapılmış	Onarım yapılmış
Şarj sırasında sorun	Cihazda yıkınmıdır kaynaklı olabilir. Şarj sırasında cihaz	Cihazın yıkınmıdır kaynaklı olabilir. Şarj sırasında cihaz
Şarj cihazı gerçekleşmiyor	Cihazda yıkınmıdır kaynaklı olabilir. Şarj sırasında cihaz	Cihazın yıkınmıdır kaynaklı olabilir. Şarj sırasında cihaz
Motor devdeğimine danışın.	Motor devdeğimine danışın.	Motor devdeğimine danışın.
Diğer	Bilinmeyen neden	

pierce cardin PARIS

6 IN 1
LADY SHAVER
PC-E11002

Mutaş Ev Aletleri
Tahtakale Cd. No:17/A Zeyt. Şişli
İstanbul
Adres: Küçükbakkalköy Mh. Kayışdağı Cd. Ayşe Nalan Çeşme Sk.
No:4 Kat: 1,2,3 PK: 34775 Ataşehir / İstanbul
Telefon: +90 216 600 20 00 / Fax: +90 216 574 38 78

Safety Instructions

⚠ **Precautions**

•Before using the shaver, make sure that it is not deformed or damaged, or there will be a risk of accident or injury.
•The shaver is thin, so be careful when handling it, or there will be a risk of injury or damage.
•Do not turn on the shaver when the frame is removed, or there will be a risk of accident or injury.
•Do not use the shaver, do not dismiss or use the internal structure exposed, or there will be a risk of accident or injury.
•Do not modify the shaver. There is a risk of injury, fire and electric shock if the shaver is modified by a person other than the repair specialist.
•Do not drop or hit the product. Do not give a strong impact on the main body. •Charge with a 5V1A adapter, or there will be a risk of fire, electric induced, or the battery may not charge properly.

⚠ **Skin Protection**

•Do not use the shaver on sensitive skin, weak skin, or allergic constitution. •Do not use on wounds, eczema, moles, bruises, rash, etc, and their surroundings or it may damage the skin, and cause inflammation and bleeding.
•Do not press hard on the skin, rub the same place many times, or let it go back and forth, or it may cause skin damage, inflammation, and bleeding.
•If any skin abnormalities occur after use, stop use it at once and consult a dermatologist.
•Before using the shaver, make sure that it is not deformed or damaged, or there will be a risk of accident or injury.

⚠ **Precautions for Storage**

•Do not leave it within the reach of infants. Small parts in this product such as cleaning blades may be swallowed, causing injuries and injuries.
•Do not store the shaver in the bathroom or places with high humidity, or there will be a risk of electric shock and short circuit.
•Avoid direct sunlight and store the shaver in a place with little moisture and dust.

Sections Introduction

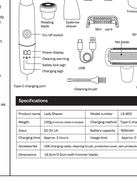

Specifications

Product name	Lady Shaver	Model number	LS-802
Weight	100g (trimmer blade included)	Charging method	Type-C charging
Input	DC 5V 1A	Battery capacity	800mAh
Charging time	Approx. 2 hours	Usage time	Approx. 2 hours
Accessories	USB charging cable, cleaning brush, protective cover, skin protective cover		
Dimensions	18.3cm*3.3cm (with trimmer blade)		

Usage Instructions

⚠ **WARNING**

Do not insert or remove the power cable without hands.This may cause electric shock or injury

⚠ **CAUTION**

•Wipe off the water droplets from the main unitand charge it when it is dry. •This may cause burns due to short circuit or overheating.
•Do not use the shaver while charging.
•Can be used for approximately 120 minutes on a single charge.
•Usage time may be reduced depending on usage conditions such as the strength of the hair to be applied to the skin, the condition of cuts, and the ambient temperature.
•When using for the first time or if the product has not been used for more than 3 months, it may take 2 hours to charge.
•The product can be used while charging. To use the product with a power adapter (not included), if the battery is low, charge it for at least 5 minutes before use.
•There is no problem with charging the product every time. But we recommend charging it only when the remaining battery is exhausted. Battery life varies greatly depending on the conditions of use and storage.

How to Change

1- Make sure the switch is at the 'OFF' position
2- Insert the plug at the bottom of the device into the socket, and plug the USB cable into a computer , mobile battery, etc.

When charging: The battery display keeps flashing slowly, and the charging indicator will flash.
Charging completed: The battery display will remain at 100, and the charging indicator will disappear.

How To Replace The Head

•Move from the switch to 'OFF' before doing so.

Remove
If you need to remove the head and replacement, gently rotate the head to the left, and then gently pull the head out of the main body. The head will be loosened and can be removed smoothly.

Install
Place the head on the main body, gently rotate it to the left, and then tighten the head to complete the installation.

How to Use Each Head

•Shave
1-Before using this product,pull the skin firmly with your hands (to stretch out any loose hair).
2-While gently holding the shaving head, move it against the direction of hair growth.

•Do not press too hard against the skin. This may cause damage or malfunction.

Body Shaver

•For short hair use a body shaver
Lightly place the entire body shaver vertically against the skin without lifting the blade, and move it slowly in a sinking motion.

1-Net blade
Removing short hair and leftover hair

2-Straight trimmer
Removing long hair, unwanted hair on arms, alms, and back

3-Curve trimmer
Removing unwanted hair from areas that are difficult to shave, such as armpits and bikini lines.

Trimmer Blade

•Recommended For those with sensitive skin, we recommend that you cover the skin guard properly when shaving, as it will make it easier to protect your skin.

For Smooth Skin

Step 1:
Attach the trimmer blade to cut thick and long hair short.

Step 2:
Replace it with the trimmer blade and finish even the finer details neatly.

For Smooth Skin

Step 1:
Attach the skin protective cover to the trimmer blade, so the blade does not touch the skin directly and you can safely cut hair short.

Step 2:
Attach the body shaver and cut even the hard to shave areas without leaving any hair behind.

How To Attach And Remove Attachments

Attach
Place the skin guard firmly onto the back of the trimmer until you hear a click.

Remove
Pull the skin guard along the back to remove it and adjust it to your desired length.

Rotating Blade

Raise your arm so that the skin is stretched in various directions.

From the ankle to the knee.

Against the direction of hair growth.

Stretch the skin with your free hand so that the hair stands straight.

Trimming Head

Fine trimming

Maintaining hair on the temples and lips

Eyebrow Shaver

Nose Hair Cutter

•Remove the nose hair shaver
2-Cover the tip of the blade into the nose or ear hole.
3-Cut while moving the device.

Before cutting, make sure the shaver and nose or ear are clean and free of foreign objects.

Insert slowly to avoid injury.

After cutting, hair debris may remain in the hole, so remove it with tissue or similar items.

LED Display



When charging, the battery display lights up from 0 to 100 in 1 by and top to bottom, gradually increasing to 100.

When the number on the display is less than 10, it will flash slowly to indicate low power. Simultaneously, the digital and charging indicators flash at the same time to inform you of charging, until the power is automatically turned off.

Prevents accidental start-up when carrying, and also prevents accidental start-up by children.

If there is too much hair and the product load has increased to a certain level, the washing caution will flash.

Safety lock on/off
•Press and hold the switch for 3 seconds. The product will display 3, 2, 1, and the safety lock is activated.

•Press and hold for 3 seconds, The product will display 3, 2, 1, and the safety lock is inactivated.

Care & Maintenance

•When maintaining turn off the power and wash the product with water.
•The entire body can be washed with water, but hot water or water vapor can enter into the product.
•Do not let it plug into the USB charging port, dry it thoroughly before charging.
•After washing with water, be sure to wipe the blade cut is not included, can be replaced with medicine oil or sewing machine oil.Not oiling may cause the blade to rust or wear, shorten its usage time, or wear out and shorten its lifespan.

Troubleshooting

If you suspect a malfunction, first check the following and take action.

Problems	Possible reasons	How to fix
Hair is pulled, the blade is not sharp, or the blade has rust, causing discomfort, uneven results, unusual vibrations or noise.	Blades not maintained properly, causing hair to be pulled or snagged.	Clean and oil the blade.
	Blades are dull or damaged.	Remove the dirt.
	Oil has disappeared.	Oil the blade.
	Blades are rust-stained.	Clean the blade.
	Blades are damaged or deformed.	Contact with our customer support.
The shaver does not turn on.	Charged repeatedly without fully discharging, causing the battery life to be shortened.	Turn the power on. Leave it idle until it shuts off. Then charge for 8 hours.
	Lithium battery is nearing the end of its life.	You recommend upcoming the shaver and wait for 2-3 hours to cool down. Then charge it in the recommended operating temperature.
	Power switch is Off.	Turn the power switch off and charge.
The shaver does not charge.	The plug is not securely inserted into the socket.	Make sure to insert the device plug securely into the socket or the charger port.
Cause unusual sound after charging.	Initial defective. Factory defects or damage during shipment.	Contact our customer support.
Charger does not fit into the charging port.	Initial defective. Incorrect insertion method	
Missing frames, missing parts, or damaged parts.	Initial defective. Incorrect insertion method	Contact our customer support.
Other	Unknown reason.	